

Rechargeable Compact handheld fan**Model No. MS-HFW4CN MS-HFP3CN MS-HFS3CN MS-HFR1CN****User Manual**

- Thank you for your purchase
- Read this User Manual before use to ensure correct use of the product.
Keep this User Manual after reading.

Table of Contents	Page
Safety Advice	1-12
Part Names	13
Charging the Product	14-18
Operating the Product	19-22
Attaching a Strap	23
Cleaning the Product	24-25
Storing the Product	25-26
Troubleshooting	26-29
Product Disposal	29
Specifications	30

Safety Advice

- * Read this Safety Advice before use to ensure correct use of the product.
- * The warnings and cautions indicated here are intended to prevent harm to the users, or damage to the property.
- * The extent of injury and damage that may arise when the product is used incorrectly is classified and explained with the following symbols. Follow all instructions indicated here as they are very important to ensure safe use of the product.

DANGER

Indicates a hazard that poses great risk of death or serious injury.

WARNING

Indicates a hazard which may cause death or serious injury.

CAUTION

Indicates a hazard that could result in injury or damage of the product if used incorrectly.

Explanation of Graphic Symbols

 Actions that are prohibited.

 Actions that must be taken.

⚠ DANGER

Do not disassemble, repair, or modify.

Doing so may cause overheating, fire, or electric shock.

Do not put in fire, or heat up in a microwave or an oven.

Doing so may cause battery leakage, rupture, or fire.

Do not use in locations subject to high temperatures, such as inside vehicles in the sun, or near a heater.

Doing so may cause deformation, malfunction, overheating, or rupture.



Do not use near flammable gas or items (such as gasoline, paraffin, or thinner).

Doing so may cause a fire.

Do not use in places with high humidity, or exposed to water droplets such as the bathroom.

Doing so may cause short circuit, electric shock or a fire.

Do not insert or allow conductive objects (metal items or pencil lead) to come in contact with the connection terminals. Do not carry/store together with a metal necklace or hairpin.

Doing so may cause battery leakage, overheating, fire or damage.

⚠ WARNING

Do not let the USB Type-c port and USB cable connector come in contact with water.

Doing so may cause short circuit, resulting in electric shock, overheating, or fire.

Do not let children use without supervision. Do not use or store within reach of small children.

Doing so may cause unexpected accidents such as ingesting a part of the strap, or suffocation from the strap.

Do not insert any metal object or any other object such as pin or metal wire into the gaps.

Doing so may cause malfunction or abnormal operation, resulting in injury.

Do not damage, alter, bend forcefully, pull, twist, place an object on, get pinched, or bundle the USB cable and the connector.

Doing so may cause damage on the USB cable or connector, resulting in a short circuit, electric shock, or a fire.

Do not use when the USB cable is damaged or loosely inserted into the USB port.

Doing so may cause short circuit, malfunction or injury.



WARNING



Do not touch the USB cable during a thunderstorm.
Doing so may cause an electric shock due to lightning strike.

Do not use for a commercial purpose or do not leave it in public places.
Continuous overload may cause product malfunction.

Do not insert/remove USB cable with wet hands.
Doing so may cause an electric shock or injury.

Do not place near a heater.
The resin part may melt, resulting in fire or burn.



Immediately turn the power off, disconnect the USB cable and stop using, if any malfunction/abnormality indicated below occurs.

- The power supply becomes unstable when the USB cable is moved.
- There is abnormal noise/vibration during operation.
- USB cable/body of the product becomes hot.
- There is a burnt smell.

Continued use in this state may result in fume, malfunction or injury.

WARNING



Insert the USB connector securely.

Not doing so may cause short circuit, resulting in electric shock, overheating, or fire.

Leave some sag in the USB cable during use.

If the USB cable is pulled or bent repeatedly, it may cause short circuit or cutting of the cord.

Be careful not to get the strap caught by a door or anything protruded.

Not doing so may cause suffocation, injury and/or damage.

Regularly remove dust and grime on the USB connector.

Not doing so may cause overheating or fire.

CAUTION



Do not charge using a USB hub.

Doing so may cause damage or malfunction.

Do not cover the air-outlet/inlet with an obstacle or tape.

Doing so may result in damage or malfunction.

⚠ CAUTION



Do not use near curtains or hung laundry.

They may get vacuumed in the grill, resulting in damage to the blade, or injury.

Do not bring hair and strap near the grill.

It may cause hair or strap to get caught, resulting in injury or damage.

Do not insert body part or any object such as a stick in the air-outlet/inlet during operation.

Doing so may cause injury.

Do not connect to a USB power source other than those with an outlet voltage DC 5.0 V.

Doing so may cause malfunction.

Do not force to move beyond movable range.

Doing so may result in damage or malfunction.

Do not pull the strap hard, swing the product by the strap, apply excessive force, or handle roughly.

Doing so may cause an accident or injury.

⚠ CAUTION

Do not operate while charging.

The battery generates heat, resulting in malfunction, injury, or deterioration of the battery.

Do not drop or drag.

Doing so may cause malfunction, damage or injury.

Do not use any USB cable other than the one for this product. Do not use the USB cable for other appliances.

Doing so may cause short circuit, or malfunction.

Do not carry/store with the USB cable left connected.

Doing so may cause damage to the product.

Do not wrap the USB cable around the product.

USB cable may become damaged, causing a short circuit and result in malfunction.

Do not use with the USB cable left twisted.

Doing so may cause short circuit, or malfunction.



CAUTION



Do not use in the following locations.

- Places with anything that is prone to be vacuumed such as near curtains.
- Places where there is a risk of falling object.
- Unstable surfaces.
- Places with high humidity and temperatures, or exposure to water droplets.
- Places subject to direct sunlight.
- Places subject to warm air from heaters.
- Places within arm's reach during sleep.

Doing so may cause malfunction and/or injury.

Do not expose operating parts and internal electric parts to water.

Doing so may cause electric shock or malfunction.

Do not use solvents such as benzene, thinner, alcohol, paraffin, or any chemicals or abrasive for cleaning.

Doing so may cause crack, discolouration and/or deformation.

Do not store in places subject to water.

Doing so may cause malfunction.

⚠ CAUTION

When disconnecting the USB cable, always hold the end of the connector.

Not doing so may cause malfunction.

Remove the USB cable from the USB port when not charging.

Not doing so may cause insulation deterioration, resulting in malfunction.

 


Turn the power off and disconnect the USB cable before cleaning.

Not doing so may cause malfunction or injury.

Be careful not to get your fingers caught in the parts indicated below with  when adjusting wind direction.

Not doing so may cause injury.

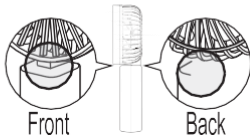

CAUTION



Use a commercially available USB-AC adapter with a rated output of DC 5.0 V and a current of 2.0 A or more, and use it properly following the instructions in the adapter's instruction manual.

Not doing so may cause malfunction.

Regularly clean the product.

Dust/grime buildup inside the grill and on blade may cause reduction of air speed, and malfunction.

Lithium-ion battery

DANGER



Do not do the actions indicated below.

- Disassembling and modification
- Throwing in fire or heating
- Exposing to water
- Using for other appliances
- Dropping, exposing to shocks, damaging
- Connecting the terminals with wire or other metal items

Doing so may cause battery leakage, overheating, rupture, or fire.

DANGER



If liquid from the rechargeable battery comes in contact with the eyes, immediately rinse with clean water and seek medical advice.

Not doing so may cause damage to your eyes.

WARNING



Do not peel off or damage the external package.

Doing so may cause overheating, rupture, or fire.



Immediately wash with clean water when liquid from the rechargeable battery comes in contact with your skin or clothing.

Not doing so may cause skin irritation.

Stop charging the battery when it does not become full even after the specified charging time.

Over charge will cause battery leakage or overheating.

CAUTION



Charge in a place with temperatures between 10 °C and 40 °C (50 °F and 104 °F).

Not doing so may cause overheating, battery leakage, or rupture.

WARNING



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

CAUTION

 


How to remove the battery:

- the battery must be removed from the appliance before it is scrapped;
- the appliance must be disconnected from the supply mains when removing the battery;
- the battery is to be disposed of safely.


Part Names

Main unit

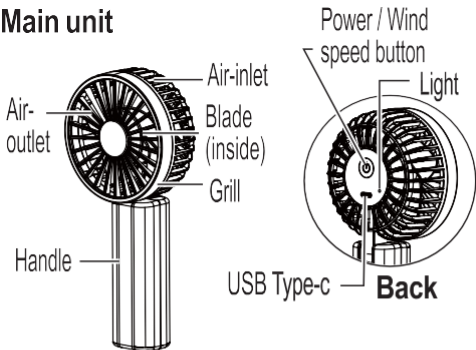

Accessories

 - USB cable

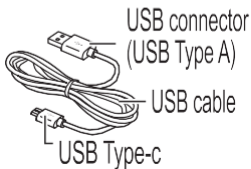

- User Manual
(This booklet)



Charging the Product

- **Charge before first use, or first use after a long period of time.**
As a nature of rechargeable battery, it drains even when not in use and becomes low.

CAUTION

Do not operate while charging.

-  The battery generates heat, resulting in malfunction, injury, or deterioration of the battery.

Charging Time

- **The product will be fully charged in approx. 3.5 hours.**
(In the case of DC 5.0 V 2.0 A. The charging time depends on the outlet current value of the device.)
- **The product runs approx. 2 hours at “High” setting after fully charged.**
(The time varies depending on surrounding temperature, and other operating conditions.)
- **The product needs to be charged when it does not start operation even Power / Wind speed button is pressed.**

■ Charging with USB-AC adapter

* USB-AC adapter is not included.

CAUTION

 
Use a commercially available USB-AC adapter with a rated output of DC 5.0 V and a current of 2.0 A or more, and use it properly following the instruction manual included with the adapter.



Not doing so may cause malfunction.

- 1** Install on a levelled and stable surface.
- 2** Insert the USB connector of the USB cable to the USB port of a commercially available USB-AC adapter.
- 3** Connect the USB Type-c connector of the USB cable to the USB Type-c port of the main unit.
- 4** Plug the USB-AC adapter.
 - The light turns on red while charging.
 - The light changes from red to green when charging is completed.

■ Charging with USB-AC adapter (continued)

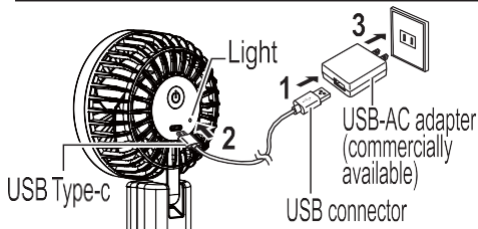

* The body of the product and USB-AC adapter become warm while charging. This is normal.

5 When charging is completed, unplug the USB-AC adapter and remove the USB Type-c connector from the USB Type-c port of the main unit.

■ Charging with USB port on a device such as PC

* Follow the instructions in the instruction manual of the device such as PC to be connected.

* Connect the USB connector directly to the USB port of an device such as PC.

When connecting to a USB hub, the product may not operate properly due to insufficient current capacity.

■ Charging with USB port on a device such as PC (continued)

* Please note that we will not be responsible for any data deleted or malfunction of the PC to which the product is connected, caused by use of the product. We will not be taking any actions for recovery of data or compensation of any damage.

 
CAUTION



- Do not use any USB cable other than the one for this product. Do not use the USB cable for other appliances. Doing so may cause short circuit, or malfunction.
- Do not connect to an appliance other than those with an outlet voltage DC 5.0 V. Doing so may cause malfunction.

- 1** Install on a levelled and stable surface.
- 2** Connect the **USBTypec** connector of USB cable to the **USBTypec** port of the main unit.
- 3** Connect the USB connector to the USB port of a PC.
 - The light turns on red while charging.
 - The light changes from red to green when charging is completed.

■ Charging with USB port on a device such as PC (continued)

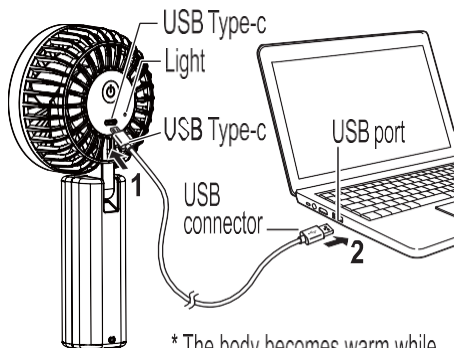

* The body becomes warm while charging. This is normal.

- 4** When fully charged, disconnect the USB connector from the USB port of the PC and pull off the USB Type-c connector from the USB Type-c port of the main unit.

Operating the Product

- 1** Hold the handle firmly. Do not cover the air-outlet/inlet. A strap can be attached.



CAUTION

- **Do not bring hair and strap near the grill.** Doing so may cause hair and/or strap to get caught, resulting in injury and damage.
- **Do not pull the strap hard, swing the product by the strap, apply excessive force, or handle roughly.** Doing so may cause an accident or malfunction.

 


Operating the Product

- 2** Long press the Power/Wind speed button for 1 second to turn and adjust the wind speed


- Starts operation on "Breeze".

Power / Wind
speed button




CAUTION

Do not operate while charging.

-  The battery generates heat, resulting in malfunction, injury, or deterioration of the battery.

Operating the Product

Adjusting the wind speed

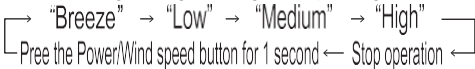- Every time the Power / Wind speed button is pressed, the wind speed changes.
Wind speed can be selected from “Breeze”, “Low”, “Medium”, and “High”.
- The product turns off when the power button is pressed while operating on “High” setting. See operating flow below.


```
graph LR; Breeze --> Low --> Medium --> High; subgraph Note; direction LR; P1[Press the Power/Wind speed button for 1 second] --> S1[Stop operation]; end
```
- Pressing the button for 1 seconds or more during any operation setting, turns operation and the power off.

Light indication


• Red light	Charging
• Green light	Charging completed
• Blue light	In operation (Breeze, low, medium, high)
• Light is off	Not in operation / Power off

Operating the Product

Adjusting wind direction

Hold the handle and carefully adjust the angle.

 - The angle can be adjusted from 0° to 120° .

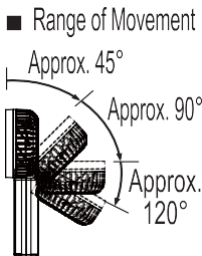

CAUTION

 


Do not force to move beyond movable range
Doing so may result in damage or malfunction.

Be careful not to get your fingers caught in the parts
indicated with 
when adjusting wind speed.



Not doing so may
cause injury.



Front

Back

 
Attaching a Strap

Installing

Strap is not included. When using a commercially available strap, choose one suitable for the weight and structure of the product. Use one with indication of maximum load.

- (1) Insert the strap's loop through the attachment hole on the main unit.
- (2) Pull the end of the strap through the loop.

* Do not attach the strap anywhere other than the strap attachment hole.

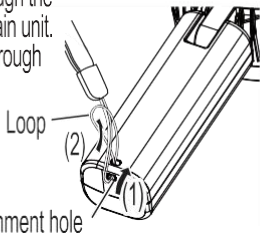


CAUTION

- **Do not bring hair or strap near the grill.**
Doing so may cause hair and/or strap to get caught, resulting in injury and damage.
- **Do not pull the strap hard, swing the product by the strap, apply excessive force, or handle roughly.**
Doing so may cause an accident or injury.




Cleaning the Product

 - 1 Turn off by pressing Power / Wind speed button, then disconnect the USB cable.
- 2 To clean the body of the product, take some water-diluted neutral detergent on a soft cloth and wipe. Wipe with a dry cloth once again to remove any detergent residue.

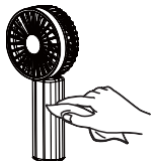

Cleaning the Product

CAUTION

 
- **Do not expose operating parts and internal electric parts to water.**
Doing so may cause electric shock or malfunction.
-  • **Do not use solvents such as benzine, thinner, alcohol, paraffin, or chemicals and abrasive for cleaning.**
Doing so may cause crack, discolouration and/or deformation.

- 3** Clean dust on the inner side of grill and on the blade with a vacuum.

CAUTION

Regularly clean the product.

-  Dust buildup inside the grill and on blade may cause reduction of air speed, and malfunction.

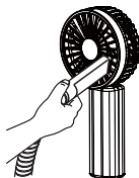

Storing the Product

- **Avoid storing when the battery is fully charged, or discharged.**
Doing so may cause decrease of battery performance or battery lifetime. Charge at least every 6 months.

Storing the Product

- For a long-term storage, store in a place with room temperature/humidity with battery half-drained.

For storage, place in a plastic bag after cleaning, and avoid direct sunlight and high temperature/humidity.

* Store in an environment of 0 °C to 40 °C (32 °F to 104 °F).

CAUTION



Do not store in places subject to water.
This may cause malfunctions.

Troubleshooting

Read this User Manual carefully and carry out the following inspections. If you are still experiencing problems, please contact the store of purchase.

Troubleshooting

Problem	Cause	Solution
When the power/wind speed button is pressed, the fan does not turn on and the indicator light does not turn on.	The power level of the battery is too low	Connect the charging cable to charge
	Press the power/wind speed button for less than 1S	Please press the power/wind speed button for 1S
The light does not turn on red while charging.	Power source of USB may have not been turned on.	Check the power source. • Plug in USB-AC adapter. • Turn on the PC.
	USB connector of the USB cable is not fully inserted or not inserted.	Securely connect the USB connector of the USB cable.
	USB Type-c of the USB cable is not fully inserted or not inserted.	Securely connect the USB Type-c connector of the USB cable.
	The battery is sufficiently charged.	It is not a malfunction.

Troubleshooting

Problem	Cause	Solution
The light does not turn on red while charging (Continued)	If USB-AC adapter with a rated output voltage exceeding 5 V is used, the battery may not be charged.	Use a USB-AC adapter with a rated output voltage 5V.
Charging time is long.	5 V/500 mA USB-AC adapter may be used.	Use a USB-AC adapter of 5 V/2 A or higher.
	Fan is operating while charging.	Turn off the fan and charge.
Fan does not operate after charging.	The motor has come to its end of life.	Stop usage
Charging time is short. The fan turns slowly even after charging.	The battery has come to its end of life.	If the symptom persists after a couple times of charging, the battery has come to its end of life. Stop use in this case.

Troubleshooting

Problem	Cause	Solution
The product becomes hot	As a nature of rechargeable battery, it may become warm when being charged, and when the product is operating on "High" setting.	It is not a malfunction.
	If the body of the product becomes so hot that it cannot be touched, overheat may have happened.	Stop use in this case.

Product Disposal

Please recycle the battery.



Lithium-ion battery is used for the product. Lithium-ion battery is recyclable. Follow the rules implemented by your local government when disposing this product.

Specifications

Rechargeable battery	Lithium-ion battery DC3.7 V, 1400 mAh
Battery life	Approx. 300 times (Discharge/Charge times) *1
Rated input	DC5 V/1.4 A
Rated power consumption	7 W
Usage environment temperature	0 - 40 °C (32 - 104 °F)
Charging time	Approx. 3.5 hours (DC5.0 V-2.0 A)
Continuous usage length (settings)	Breeze: Approx. 10 hours, Low: Approx. 6.5 hours, Medium: Approx. 3 hours, High: Approx. 2 hours
Wind speed levels	4 Settings (Breeze, Low, Medium, High)
Size	Approx. W68 × D33 × H148 mm (W2.7 × D1.3 × H5.8 in)
Product weight	Approx. 92 g (0.20 lb)
Main materials	Body: ABS resin / Blade: PP
USB cable length	Approx. 60cm (24 inch) (not including connector)

*1. The indicated life time of battery is an average value. Actual life time depends on some conditions such as temperature and length of use.

MUJI (Shanghai) Company Limited
35FPak Place, 1601 West Nanjing Road Jingan District
200000 Shanghai PEOPLES REPUBLIC OF CHINA
Manufactured by RYOHIN KEIKAKU CO. LTD.
25-1 Kojaku, Bunkyo-ku, Tokyo, Japan
Imported to EU by MUJI Deutschland GmbH
Kufeldstrasse 236, 10719 Berlin, Germany
Imported to UK by MUJI EUROPE LIMITED
21 Abchurch Lane, London EC4N 3DF, UK
Imported to Australia by MUJI RETAIL (AUSTRALIA) PTY LTD
Level 5/90 William Street Melbourne, VIC 3000, Australia
Imported to USA by MUJI USA LIMITED
250 West 39th Street, Suite 202 New York, NY 10018
Imported to Canada by MUJI CANADA LIMITED
595 Bay Street Unit G03 Toronto ON M5G 2C2

- (☐ This product complies with all relevant and effective
☐ European Community legislations.

UK This product complies with all relevant and effective
CA UK legislations.



This symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the store where you purchased the product, or your local authority.



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

For more information about recycling of this product, please contact the store where you purchased the product, or your local authority.